



Manual Firmware Update Instructions for Drobo


1. Download the Drobo Firmware file and save it to a folder not located on your Drobo.

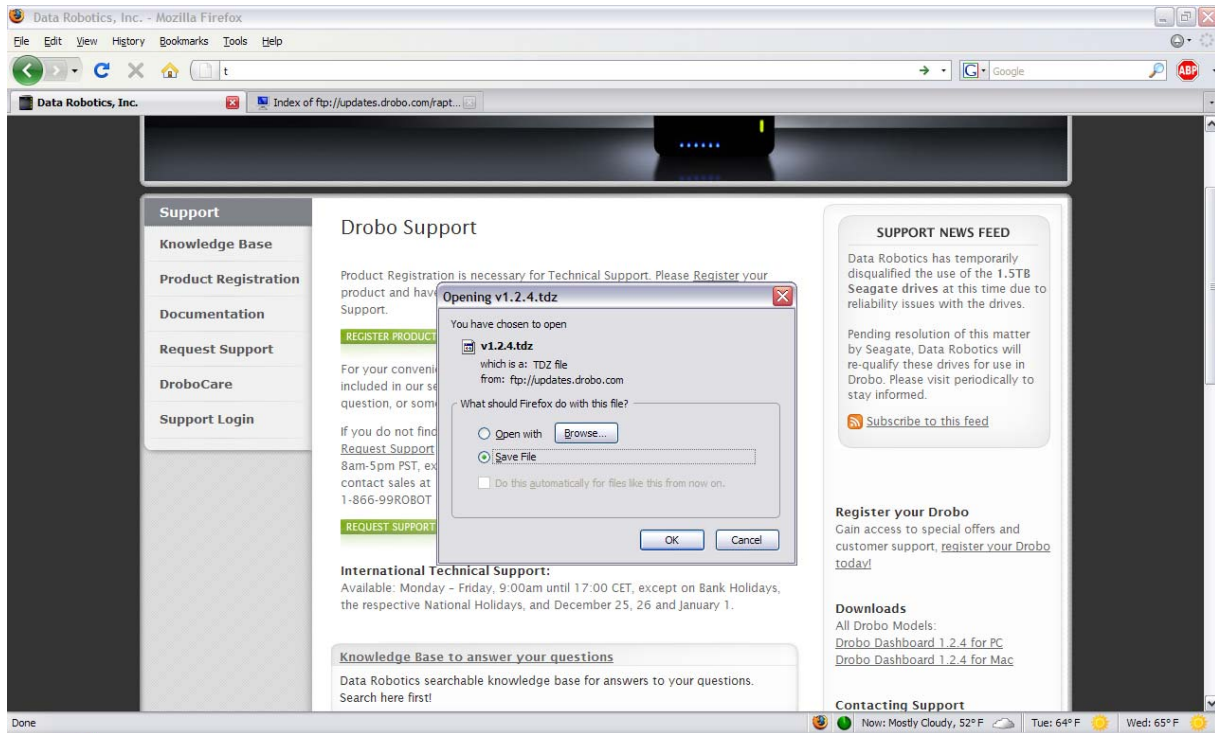


2. Open Drobo Dashboard and click Advanced Controls.

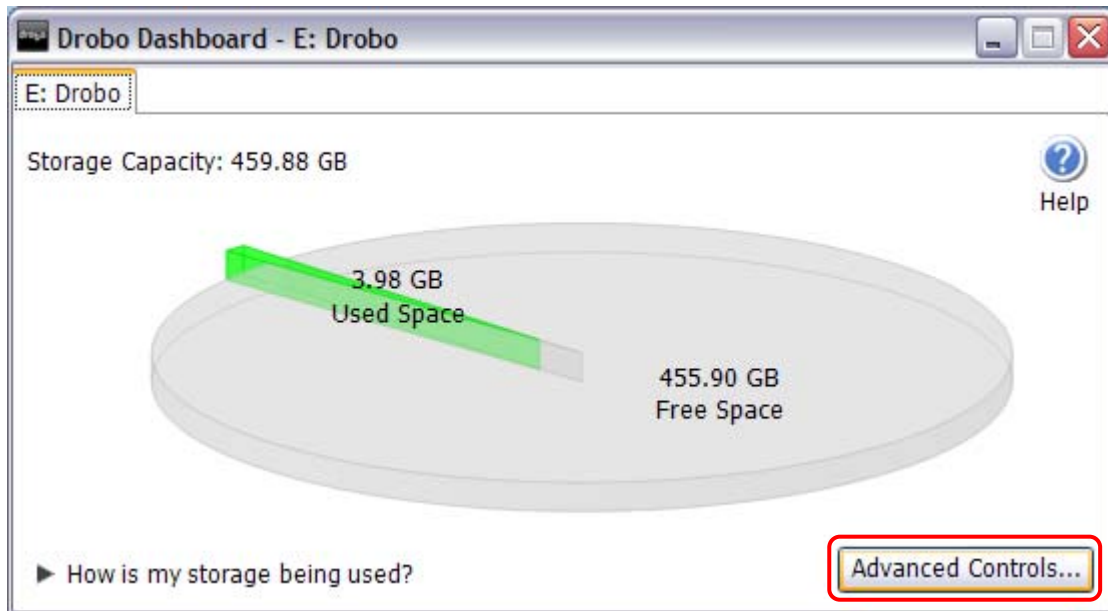


3. In the Advanced Controls window, navigate to the Tools Tab. **Next, hold down the Control key on your keyboard and at the same time click Check for Updates.**

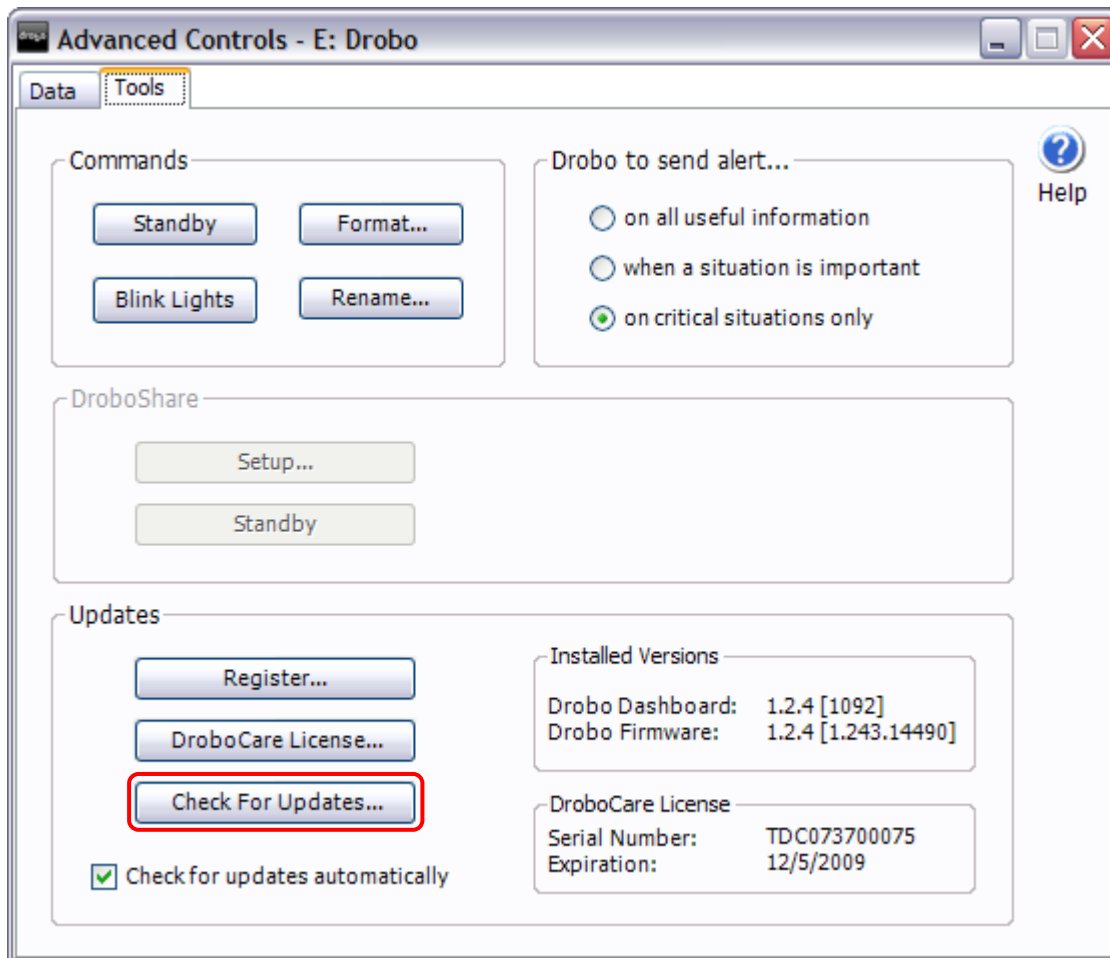


4. You will be presented with a dialog which allows you to select the Drobo Firmware file. Navigate to the location where you saved the Drobo Firmware file, select the .tdz, and click Open.

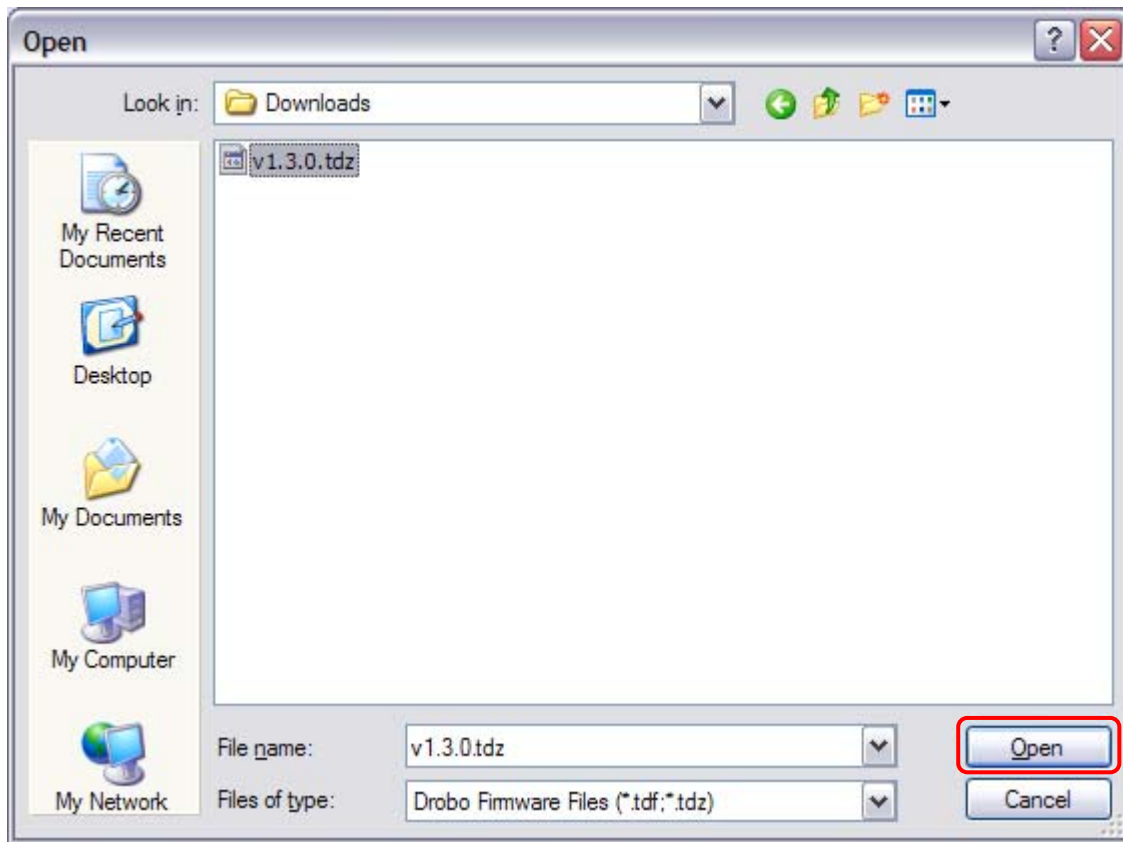


5. Make sure that you are not actively transferring data to or from your Drobo and then click OK.

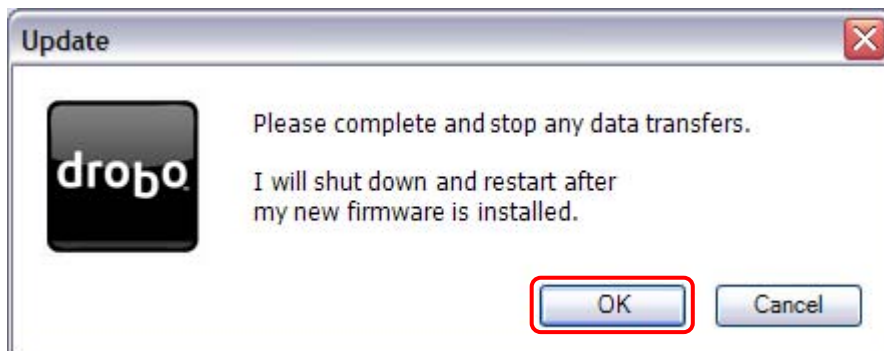

6. While the update is occurring the following dialog will appear. The update process will take a few minutes.

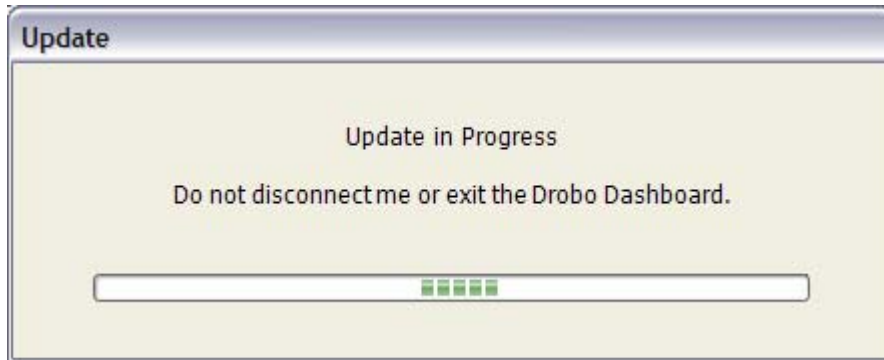

7. After the update process is complete, a dialog will appear asking you to reboot your Drobo. Click Reboot Drobo now.

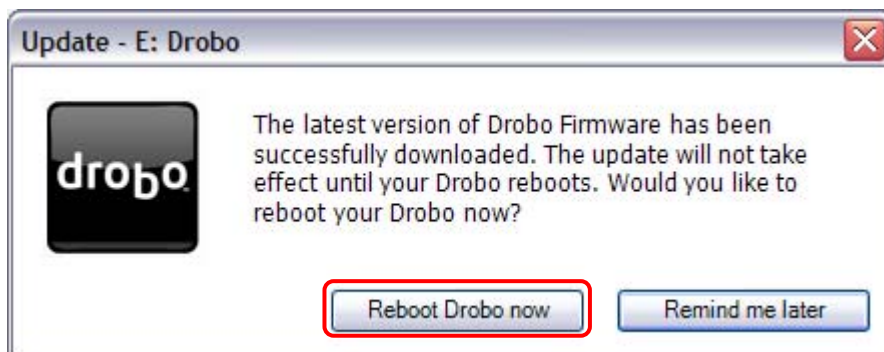

- To verify that your Drobo is running the new Firmware, go back to the Tools Tab in Advanced Controls. The version of Drobo Firmware is displayed in the bottom right corner.

